


IMPACT Implements CAT-1 Quick Hitch IP6310



22000 Industrial Blvd, Ste 250
Rogers, MN 55374
866.527.7637

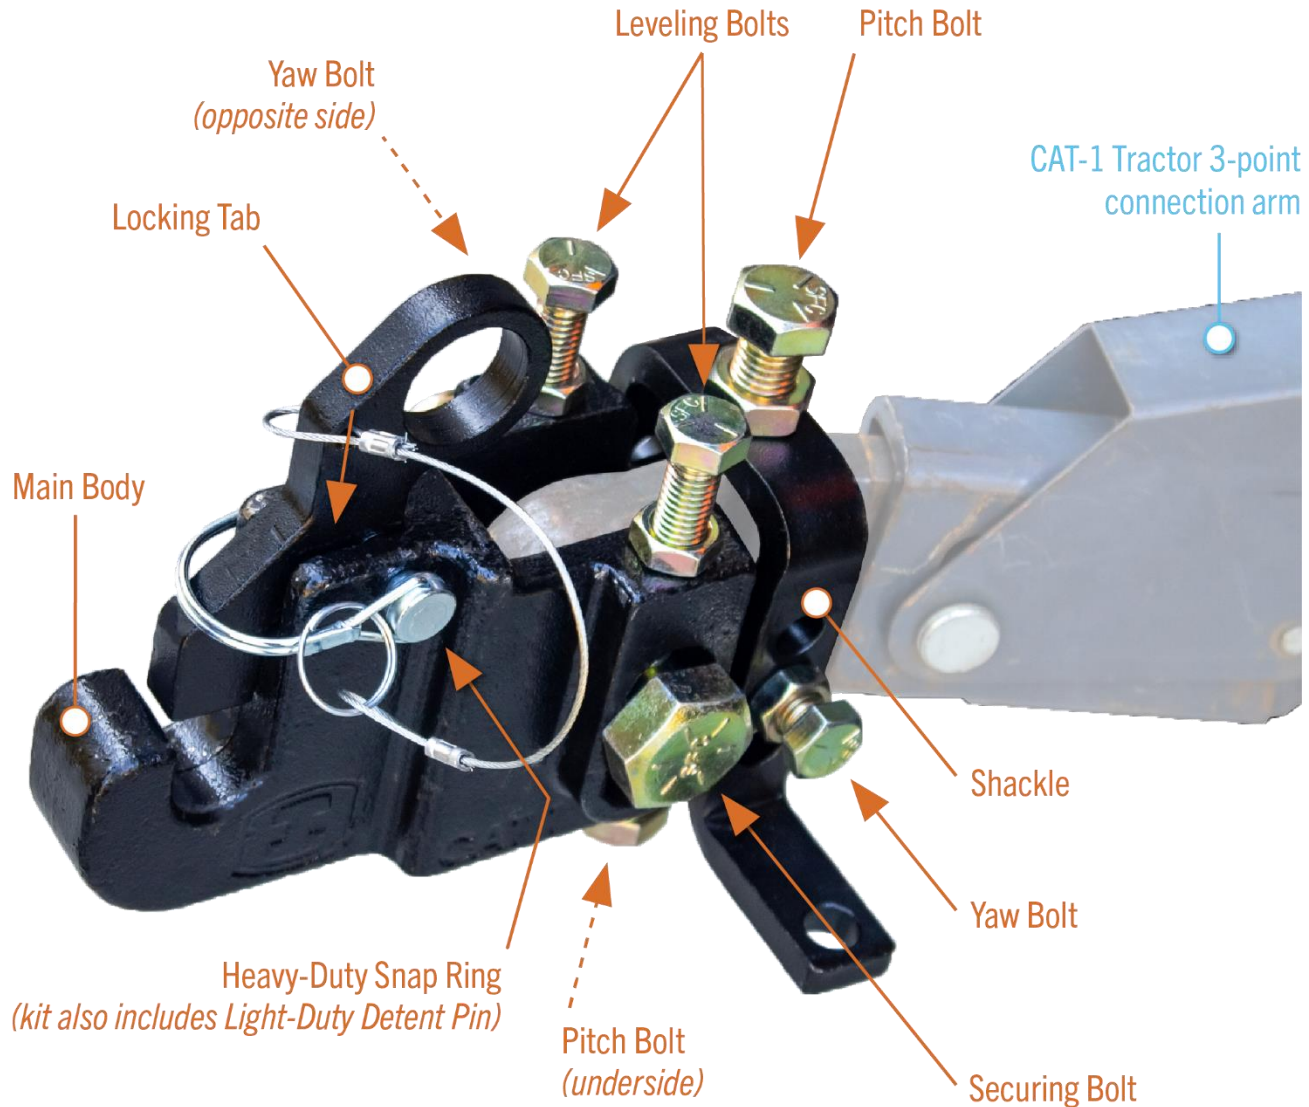

INSTALLATION INSTRUCTIONS

1. Place the body of the quick hitch on the 3-point arm
2. Insert the securing bolt through the indicated slot and tighten the nut fully
3. Place the shackle over the 3-pt hitch arm and insert the yaw bolts to secure
4. Use the pitch and yaw bolts to center and true the quick hitch with the 3-pt arm
5. Tighten the leveling bolts till snug
6. Check over all bolts and fully tighten
7. Tighten the jam nuts to secure the bolts in place

Rather watch a video?

**Open your phone camera and scan the code below to watch a
full install on our MotoAllianceTech YouTube channel.**



For any additional questions email us at:

TECH@MOTOALLIANCE.COM

Thanks for choosing MotoAlliance.