



DENALI Plow Mount MA11160 Arctic Cat

Thank you for purchasing our DENALI plow mount. You now own a premium custom plow mount to allow you to use your plow with your ATV. Please note the following instructions and heed all warnings.

- Your ATV and/or plow system can cause death or injury, please use caution and common sense when operating your unit.
- Read your Plow Operator Manual, your Winch Operator Manual, and all warning labels before operating your ATV.
- Operate your ATV at a walking speed with the blade installed. Do not exceed 5 mph (8 km/h), even with the blade up.
- Do not operate the ATV on slopes greater than 10 degrees with the plow installed.
- Always lower the plow to the down position before leaving your ATV unattended.


SEVERE INJURY OR DEATH MAY RESULT IF YOU ARE NEGLIGENT.



Please verify that all hardware and parts are included in your package.

Kit Contents:

Item Number	Description	Quantity
1	Plow Mount	1
2	5/16" Square U-Bolt	4
3	5/16" Flat Washer	8
4	5/16" Nylock Nut	8

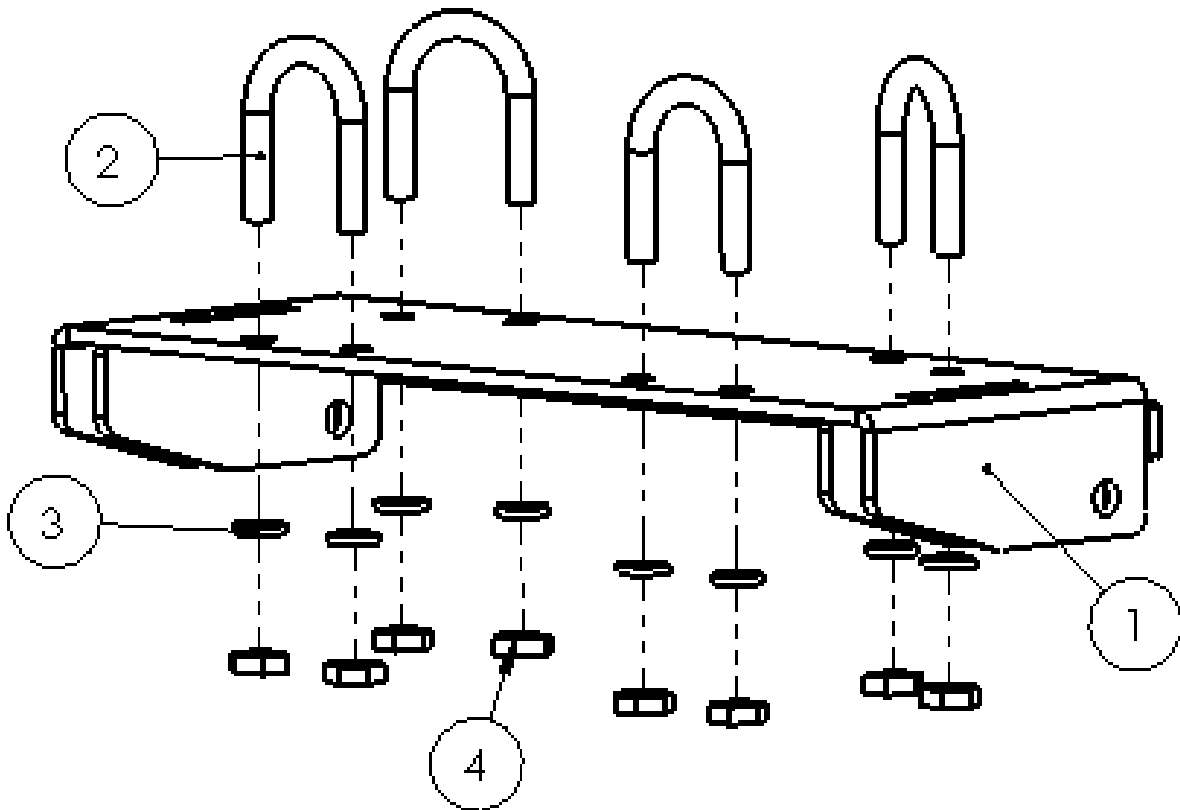



Plow Mount Assembly:

1. Look toward the back of the vehicle from the underside you will find holes for two of the 5/16" U-bolts, insert them from the top of the frame as seen in Figure 1.



Figure 1

2. With the rear U-bolts hanging on the frame, hold the plow mount up to the frame of the ATV with the angled tabs facing forward. Use the 5/16" nuts & washers to hold the mount in place, be sure to center the mount over the frame as you will use the mount at a template to clearance two holes for the front U-bolts.
3. Use a 5/16" drill bit to drill two clearance holes for the front U-bolts, insert the remaining U-bolts from the top of the frame. It may be necessary to pull back the front wheel well covers to insert the U-bolts.
4. Tighten all the hardware and install the pushtube system per the manufacturer's instructions.

Arctic Cat
MA11160



motoalliance

22000 Industrial Blvd
Rogers, MN 55374
866.527.7637

