



CF Moto UForce U10 Plow Mount MA11771

INSTALLATION INSTRUCTIONS

Thank you for purchasing a DENALI Plow Mount.
You now own a premium, custom mount to allow you to use your plow with your vehicle.
Please note the following instructions and heed all warnings.



- Your vehicle and plow system can cause death or injury. Please use caution and common sense when operating your unit.
- Read your Plow Operator Manual, your Winch Operator Manual, and all warning labels before operating your vehicle.
- Operate your vehicle at a walking speed with the blade installed. Do not exceed 5mph (8km/h) even with the blade up.
- Do not operate the vehicle on slopes greater than 10 degrees with the plow installed.
- Always lower the plow to the down position before leaving your vehicle unattended.


SEVERE INJURY OR DEATH MAY RESULT IF YOU ARE NEGLIGENT.

PARTS LIST



Please verify that all hardware and parts are included in your package.

Part#	Qty	Item Description
1	1	MA11771 Plow Mount
2	4	M10-1.25x30 Serrated Flange Bolt

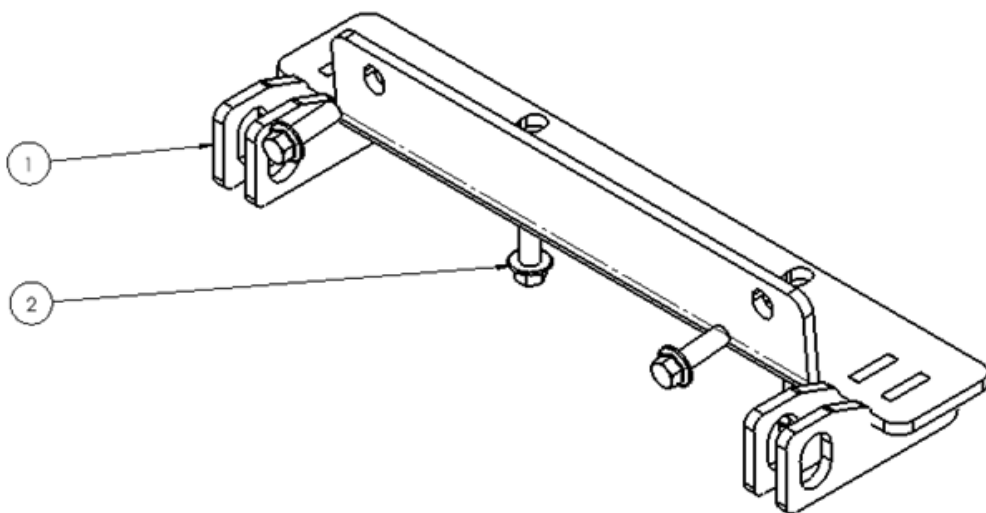

Figures Color Key |  Parts native to the machine  Parts native to DENALI Plow Mount

INSTALLATION INSTRUCTIONS

1. Remove the two lower bolts on the bumper. *FIGURE 1*



FIGURE 1

2. Place Mount to the bumper and lineup the two front holes and the back.
3. Use M10 Hardware to secure the mount to the machine.